USER MANUAL

SYTECH®

When technology turns to art

GRILL

SY·GR60

WELCOME

Congratulations on the purchase of your new Grill SY-GR60. In order to fully benefit from this product please read the following instructions carefully. Store this user manual in a safe place for future references.

SAFETY INSTRUCTIONS

- The appliance must be connected to a voltage supply of 220 V – 240 V Only.
- This appliance is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cable is damaged, contact Sytech Hotline Service Center for a proper repair or exchange. This will avoid any hazard.
- Do not allow the power cable to hang down with easy reach. Keep children away from the packaging material (e.g. plastic bags).
- Never pull the plug out of the socket by the cable or with wet hands. Disconnect the mains plug in case of faults during use, before cleaning or moving the appliance from place to place, after use.
- Regularly check if the mains cable/ appliance/ extension lead are in perfect state. In the contrary, the appliance must not be put into operation (immediately pull out the plug). Contact the Sytech Service Centre for reparation.
- Only trained personal should repair electrical appliances. Unskilled repairs can cause considerable danger to the user.
- Do not leave the unit unattended when it is connected
- Be careful when manipulating with the unit and avoid contact of the skin with the parts that become hot
- Keep the cable away from places where heat is present
- Do not use this unit with a voltage converter
- Do not use an extension cord with this unit.
- No warranty for any possible damage can be accepted if the appliance is used for improper purpose, wrongly operated or unprofessionally repaired. In such case, any warranty claim is void.
- Only use the temperature controller/power cable supplied by Sytech for this appliance (SY-GR60, 250V, 10A)
- Do not use any attachments that are not recommended by the manufacturer.
- The appliance should not be operated by means of an external timer or separate remote-control system.
- Never put the appliance / cable on hot surfaces or near open flames.
- The appliance is designed for household use and not for industrial operation. Do not operate the appliance outdoor.
- Never place the appliance on soft cushions/pillows or blankets during operation.
- Never carry or pull the appliance by the cable, don’t pull the cable over sharp edges. Do not jam or bend the cable.
- Switch the appliance off and pull the plug out of the mains when it is not in use. Don’t wind the cable around the appliance.

GENERAL VIEW

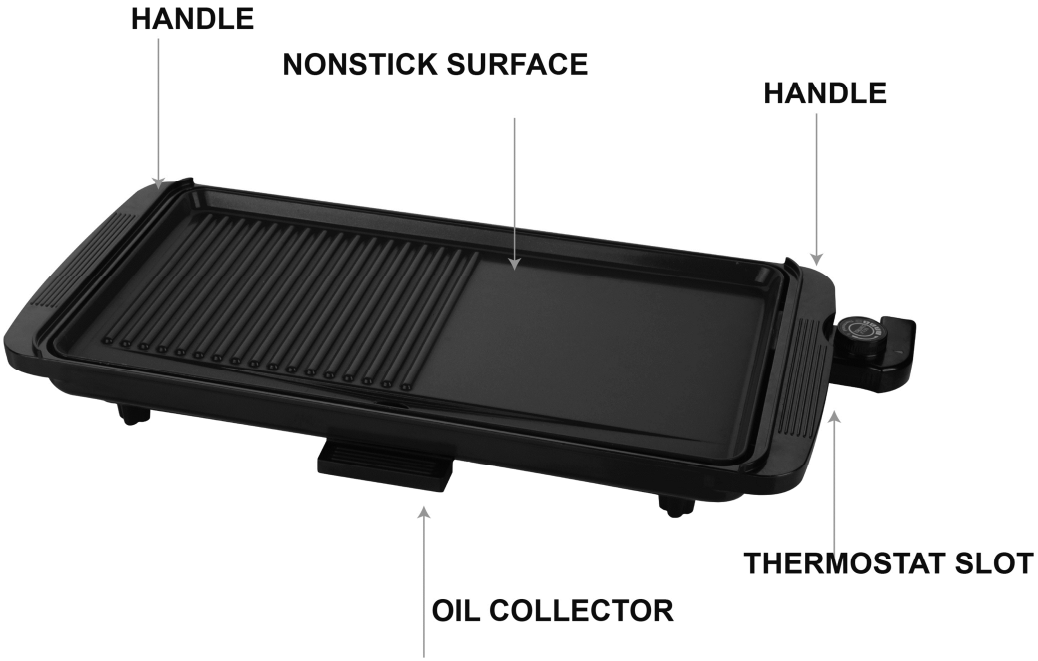

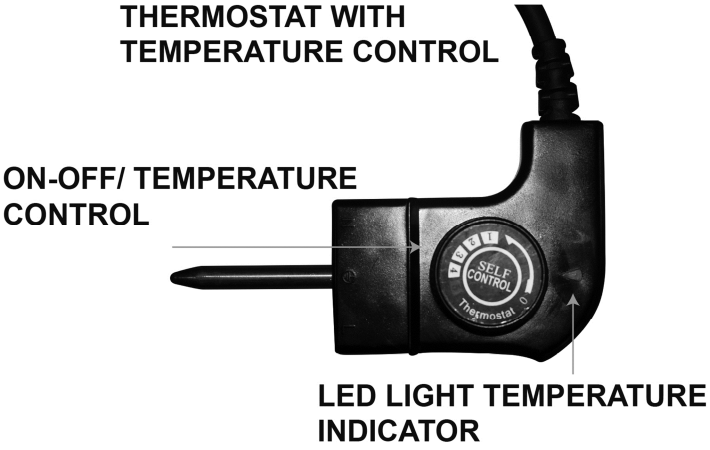

BEFORE FIRST USE

- Remove all the parts from the packaging.
- Clean all the parts carefully with a dry soft cloth. Do not use abrasive products or cloth which contains metal parts.
- The first time you use this product, there may be a slight smell, and this might be the residue of the dust which has remained during the time of production. This smell is normal and will disappear once the unit has been used 1 or 2 times.

CONNECTING THE GRILL

Connect the thermostat into the slot designed for it on the side of the grill. Make sure the thermostat is

Connect the switch to the wall outlet.

Note:

- *Only use the cable/thermostat provided by the manufacturer for this unit.*
- *Never immerse the unit, the switch, the thermostat or any part of the unit in water or other liquids.*
- *Do not use abrasive cleaners or hard sponges*

FIRST USE

Apply a few drops of oil on the surface of the grill in order to cook.

Connect the switch to the wall outlet.

Turn on the unit (select heat level between 1-5) and let it heat up for about 15 minutes.

COOKING

Set the temperature to your desired level. (The LED light indicator will go on at this point)

When the temperate set has been reached, the light indicator will turn off. At this point you may now place the food on top of the grill surface using a few drops of oil or no oil at all.

The grill surface get very hot – Risk of burns!

During the cooking process the LED light indicator will go on and off constantly. This indicates that the temperature set is being maintained at all times.

Do not use metal objects on top of the grill or do not cut any food while it is on the grill as this may cause damage to the surface and the ceramic coating.

Once you have finished the cooking process, turn the switch to “0” position and then unplug the switch from the wall outlet. Allow the unit to cool down before manipulating it.

PRECAUTIONS WHILE COOKING

- Do not apply large quantities of oil or butter on the grill surface.
- Be careful with the splashes from the grill surface whilst cooking. Use cooking gloves if necessary.

CLEANING

Before performing any cleaning process, disconnect the cable from the wall outlet and remove the thermostat from the unit.

Surface of the grill

Clean the non stick surface of the grill using a soft humid piece of cloth with a bit of soap. Wash the surface properly and make sure no soap remains on the surface.

Temperature control/Thermostat

Wash the outside of the thermostat with a soft dry cloth.

Oil collector tray

Remove the oil collector tray from its position and spill out the collected oil. Wash thoroughly and place it back into its original position for its next use.

QUICK COOKING GUIDE

The following guide is just for information purposes

- Times and temperature may vary depending on the quantity of the food and personal choice.
- The times for meats, poultry and fish are based on a thickness of 1 to 1.5 cm

Food	Cooking Time (minutes)
Bacon	1 – 2
Chicken breast	7 – 9 (each side)
Fish	5 – 7
Hamburger	4 – 6
Hot Dogs	3
Lamb Chops	4 – 6 (each side)
Pork Chops (with bone)	6 – 8 (each side)
Sausage	2 - 4
steak: Medium	4 – 5 (each side)
Well done	6 – 9 (each side)
Fried Egg	1 – 2

TECHNICAL SPECIFICATIONS

Model:	SY-GR60
Voltage:	220 – 240 V
Power Output:	1700 – 2000 W
Frequency:	50 Hz
Plate Dimensions:	46,5.x 26,0 cm.
Weight:	2.10 kg
Grill dimensions:	58 x 28 x 7,5 cm.
Material:	Ceramic

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.
Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Grill
Sytech® SY-GR60 complies with the following directives:

EMC Standard: Directive 2004/108/CE

LVD Standard: 2006/95/EC

LFGB Standards

ROHS Standard: 2011/65/EC Restriction of Hazardous Substances

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator